




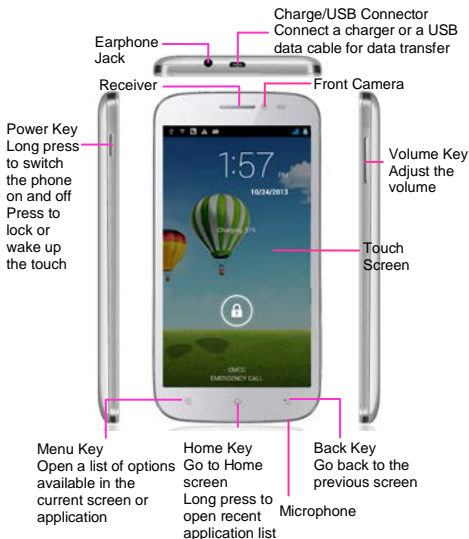


Precautions

	<p>Please carefully read and observe the terms below: Safe power on Do not use your mobile phone where it is forbidden to use or you might cause a disturbance or danger.</p>
	<p>Safe transportation first Please observe all related local laws and regulations. Do not use your mobile phone while driving. Safe transportation should be considered first when driving.</p>
	<p>Turn off when in the hospital Please follow related limitations. Please switch your mobile phone off when near a medical instrument.</p>
	<p>Turn off on an airplane Please follow related limitations. Do not use your mobile phone on an airplane.</p>
	<p>Turn off when at a gasoline station Do not use your mobile phone at a filling station or around fuels or chemicals.</p>
	<p>Turn off around exposure Area Please observe related limitations and do not use your mobile phone near an area where explosions can occur.</p>
	<p>Backup Remember to make a backup or keep a written record of all important information saved in your mobile phone.</p>
	<p>Use qualified after sales service Only a qualified technician can install or repair your mobile phone. Please contact the authorized service center in case of phone failure.</p>
	<p>Accessories and batteries Only use the authorized accessories and batteries and do not connect to incompatible manufacturers or products.</p>

Your phone



Your phone

Back Camera



Speaker

Battery Cover & Battery

Removing the Battery Cover

1. Hold the device firmly and locate the cover release latch.
2. Place your fingernail in the opening and remove the cover according to the arrow direction.




Installing the Battery

1. With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place.
2. Ensure the battery is inserted in the phone. To charge the battery, plug in the charger connector at your phone (USB interface) and then plug the other end into an AC power socket.

The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged. Disconnect the charger from the phone. Disconnect the charger from the AC power socket.

Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.

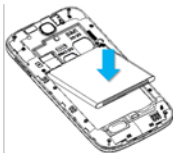

SIM Card & microSD


Installing the SIM Card

Make sure that the clipped corner of the SIM card is facing the correct direction and the metallic contacts are facing the correct direction. Slide the SIM card into the card slot until it stops.



Installing the microSD Memory Card

Slide microSD card into the SD card slot with the metallic pins facing downwards. Push the card until it locks into place.

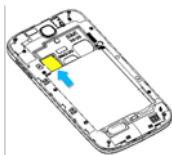


Lock & Unlock Screen

Locking the Screen

To save your battery, prevent accidental touches or when you want to wipe smudges off your touch screen, put the touch screen to sleep by pressing the Power Key

Unlocking the Screen


To wake up the touch screen, just press the Power Key again, and then drag the lock icon to the right on the screen to unlock according to the clue on the screen.

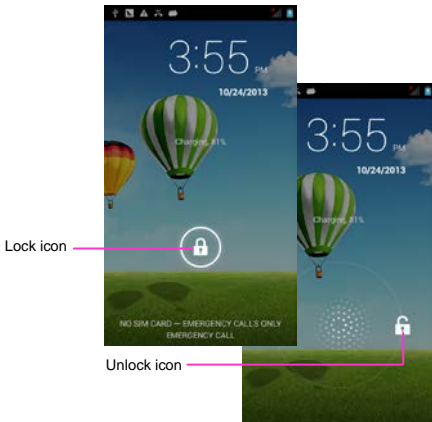

Home Screen

Status Bar and Notifications


The status bar at the top of the screen contains icons that tell you about messages and phone status and shows what's going on in your phone. You can drag down the status bar to open the Notification panel and get more information.

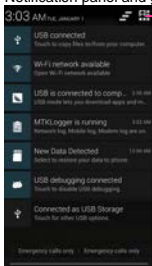

Touch to open the toolkits panel

Toolkits

In the toolkits you can quickly start the common applications such as Bluetooth, WLAN and so on.

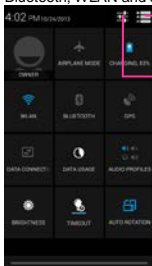

Touch to open the Notification panel

Touch to open the system settings

Home Screen

The Home screen is your gateway to the main features in your phone.

Notifications

Drag down to open the Notification panel

Status bar



Slide the Home screen left or right to view more content in other panels on the Home screen

The favorite tray

Touch the applications in the tray to enter applications


Touch and hold the applications to drag them in or out from the tray

Launcher

Touch to enter Main menu
Browse all the installed applications

Customizing

The phone provides you with Options menus.
Touch the Menu Key to enter customizing:

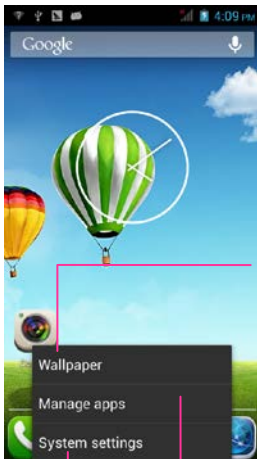


Touch to select a wallpaper, and set it as the wallpaper of Home screen

Touch to enter the Settings, and set the system preferences

Touch to enter the Apps, and manage applications

Phone Function

Making a Call

Touch  to enter the Dial pad.

The phone offers you several ways of making a call.

You can make a call through the Phone, People, Messaging and Call log.



Connecting to WLAN

Connecting to WLAN

1. You can connect to the WLAN, and use it to surf the Internet at high speed and download.


Touch Launcher → Settings → WLAN.

2. Turn on the switch to activate WLAN.




3. Touch WLAN.

4. Choose an available WLAN network to connect

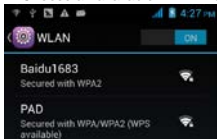

 5. Secured networks are indicated with a Lock icon. If the network is secured, you are prompted to enter a password or other credentials (Ask your network administrator for details)



6. Touch "Connect".

Accessing the Internet

Using the Browser

Touch  to enter the Browser.



Touch to go back
to the previous
page


Touch to forward the
browser to the next
web page

Touch to look through the thumbnails
of all web page windows, and switch
the web pages

Touch to enter the Bookmarks


Accessing the Internet


When you are viewing the web page, touch the Menu Key, the following options are available to you:

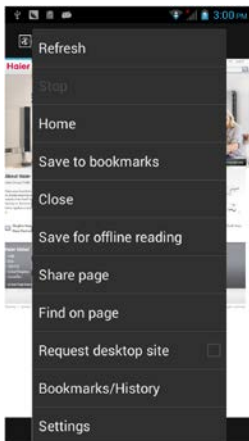

Taking Pictures/Videos

Taking pictures and videos


Touch  to enter the Camera.

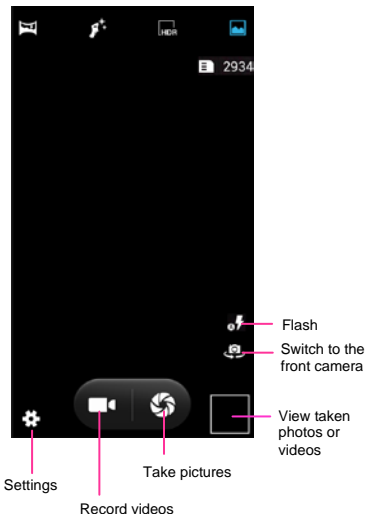

Playing Music

Music Player

Touch  to enter Music.

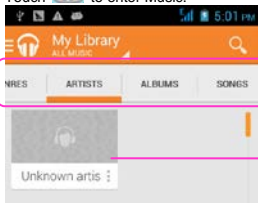

Categories
Select Genres,
Artists, Albums, and
Songs

Touch to open the
album, songs or
playlist



Previous song

Play/Pause

Next song

Shuffle

Repeat: Touch to
repeat the all songs;
touch again to repeat
the current song

Troubleshooting

Frequently Asked Questions	Cause and Solution
Fail to turn on	Press the Power Key for over 1 second. Check if the battery is properly connected. Please remove and install it again, retry to turn it on; Check if battery is appropriately charged.
Fail to connect network	Weak signal. Please try and move to a location with strong signal and try connecting to the network again; Please ensure that you are not beyond the network coverage of service providers; Please ensure you have a valid SIM card. Please contact your network provider for further information;
Poor quality of calling	Please check if the sound volume is tuned improperly In an area with poor receiving condition, example: basement, the signal might be weak. Try searching a location with stronger signal reception and call again. While using the mobile phone in the peak period of communication, like commute time, you may be unable to call because of line congestion.
SIM Card Error	Dirt on the metal surface of an SIM card. Use clean cloth to wipe the metal touch point on an SIM card. The SIM card is not installed. The SIM card is damaged. Please contact your network service provider.
Callers cannot contact you	Please check if the mobile phone is on and connected with the network. Please check if the Call barring or call divert is activated. Please check if the SIM card is valid.
Fail to set some functions	Wrong operation. The network provider does not support the function, or you have not applied for it.

